


ELECTRICAL SYSTEM

Pin - out location for connectors L, I, J, O, R, N, M, A, P and S

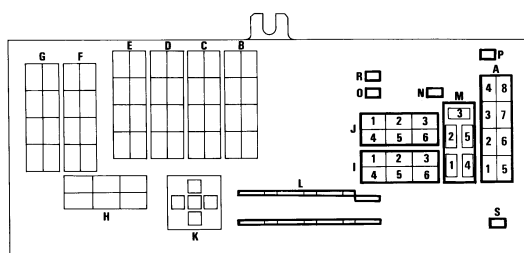

Fusebox - Rear view

Connector L

Pin	Colour	Service
—	R	Combination switch power supply
—	R	Fusebox: connector O (1)
—	R	Terminal board for battery power supply cables
—	R	Terminal board for battery power supply cables

(1) For **2.0** (turbo diesel) version

Connector J: yellow colour

Pin	Colour	Service
1	—	Free
2	S	Brake pad wear sensor
3	S	Rear power window inhibitor switch
4	R	Ignition switch
5	—	Free
6	G	Fusebox: connector F, pin 1

Connector I: red colour

Pin	Colour	Service
1	—	Free
2	G	Cigar lighter
3	G	Lamp dimmer rheostat
3	V	Combination switch
4	HN	Combination switch
4	—	Free
5	—	Free
6	SB	Cluster
6	SB	Heated rear window switch

Connector O

Pin	Colour	Service
—	SB	Fusebox: connector M, pin 4 (2)
—	R	Fusebox: connector L (1)

(1) For **2.0** (turbo diesel) version
(2) For air conditioned vehicles

Connector R

Pin	Colour	Service
—	S	Brake fluid level relay (1) (2)

(1) For **2.0** (turbo diesel) version
(2) For **2.0** carburetors, **6V** (injection) versions

Connector M

Pin	Colour	Service
1	SB	Rear cigar lighter (2)
2	R	Front power window switches
3	RN	Hazard lights switch
4	RN	Engine compartment lamp
4	SB	Fusebox: connector O (1)
5	R	Fuse light
5	B	Stop light switch

(1) Not connected on **2.0** (turbo diesel) version
(2) Connected on **6V** (injection) version only

Connector P (1)

Pin	Colour	Service
—	R	Relay set (Injection system)

(1) Connected on **6V** (injection) version only

Connector N (1)

Pin	Colour	Service
—	N	Glow plug pre-heating control unit

(1) Connected on **2.0** (turbo diesel) version only

Connector A: grey colour (1)

Pin	Colour	Service
1	HN	TRIP COMPUTER (3) (4)
2	H	Rear fog lights switch (2) (3)
3	AB	Fusebox: connector A, pin 7 (2) (3)
4	N	TRIP COMPUTER ground (3) (4)
5	V	Intermediate connector (2) (3)
6	SB	Cluster (3) (4)
7	AB	Fusebox: connector F, pin 3 (2) (3)
8	AB	Fusebox: connector A, pin 3 (2) (3)
8	H	TRIP COMPUTER: speedometer pulse generator (3) (4) *

(1) Not connected on **2.0** (turbo diesel) version
(2) For **1.8** **2.0** versions (for **CI** only)
(3) For **6V** (injection) version (for **CI** only)
(4) For **6V** (injection) version (for **CI** excepted)

Connector S

Pin	Colour	Service
—	—	—