


FUSEBOX PIN-OUT

For connector pin - out location, refer to the connectors shown in the fusebox rear view and to the related tables.

Pin - out location for connectors G, F, E, D, C, B, H and K

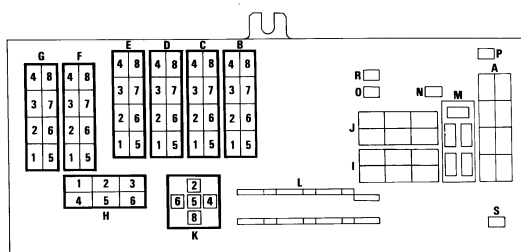

Fusebox - Rear view

Connector G: red colour

Pin	Colour	Service
1	M	Ignition switch
	VN	Connector for injection power supply wiring (1)
2	N	Intermediate connector (SWB - AUS versions excepted)
3	G	Fusebox: connector F, pin 1
	G	Combination switch
4	RN	Door lock control unit
5	N	Intermediate connector (CH SWB and AUS versions excepted)
	N	Fusebox: connector D, pin 1
6	Z	Fog lights switch
7	—	Free
8	CN	Heated rear window switch

(1) versions excepted

Connector F: brown colour

Pin	Colour	Service
1	G	Fusebox: connector J, pin 6
	G	Fusebox: connector G, pin 3
2	—	Free
3	AB	Fusebox: connector A, pin 7
4	H	Combination switch
5	RN	Hazard lights switch
6	AN	Warning lamps panel
7	—	Free
8	—	Free

Connector E: yellow colour

Pin	Colour	Service
1	N	Heated rear window
2	—	Free
3	AB	Left fog light
	AB	Right fog light
4	RN	Rear power windows switch
5	—	Free
6	—	Free
7	N	Fusebox, connector D, pin 1
8	GV	Fog lights switch

Connector C: blue colour

Pin	Colour	Service
1	Z	Combination switch: windscreen wiper
2	RN	Combination switch: windscreen wiper
3	BN	Headlights wiper timer
	BN	Combination switch: headlights wash/wipe
4	—	Free
5	HN	Windscreen wiper motor
6	—	Free
7	—	Free
8	—	Free

Connector H: black colour

Pin	Colour	Service
1	RN	Headlights wiper timer
2	BN	Combination switch: direction indicators
	BN	Hazard lights switch
3	GN	ALFA ROMEO Control: connector A, pin 5
4	—	Free
5	G	ALFA ROMEO Control: connector A, pin 4
6	SB	Fuel electric pump (1)

(1) SN colour for version, valid for air - conditioned vehicles

Connector D: green colour

Pin	Colour	Service
1	N	Fusebox: connector G, pin 5
	N	Fusebox: connector E, pin 7
2	AN	Windscreen wiper motor
	SN	Combination switch: windscreen wiper
3	H	Front right combination lamp: full beam light
	H	Rear fog lights switch
4	HG	Number plate lights
5	SB	Rear power window inhibitor switch
6	V	Front right combination lamp: low beam light
	V	Intermediate connector (CH version)
7	HN	Front left combination lamp: low beam light
8	VN	Front left combination lamp: full beam light
	VN	Warning lamps panel

Connector B

Pin	Colour	Service
		Not connected

Connector K

Pin	Colour	Service
2	VB	ALFA ROMEO Control: connector A, pin 10
4	HN	Passenger compartment roof lamp switch
	HN	Fuse light (1)
5	—	Free
6	—	Free
8	—	Free

(1) For versions